

Dialog Box Parameters

	SD	KN	TF	GY	RG	AB	ICS	RF	ICF
Value	1	-	1	1	1	-	1	-	-
Block function tunable	2	1	2	2	2	-	2	3	2
Type	3	2	3	3	3	1	3	4	3
Power output available	4	-	-	-	4	-	4	5	4
Mode	5	-	4	4	5	-	5	-	-
Source extern	6	-	-	-	-	-	-	-	-
Add IC (0) – bLock	7	-	-	-	-	-	-	-	-
Fed Power Ports (FPP number)	-	3	-	-	-	-	-	-	-
Consumed Power Ports (CPP number)	-	4	-	-	-	-	-	-	-
Alternative power variable input	-	5	-	-	-	-	-	-	-
Bidirectional negative sign for first CPP	-	6	-	-	-	-	-	-	-
Parameter non-linear	-	-	5	5	6	-	-	7	8
Negative sign for “output”	-	-	6	6	-	-	-	-	-
Momentum output available	-	-	-	-	-	-	6	-	6
Displacement output available	-	-	-	-	-	-	7	-	7
Reset integrator / DM limitation available	-	-	-	-	-	-	8	-	-
Initial value for power variable output available	-	-	-	-	-	-	9	-	-
Gain-Matrix (symmetric)	-	-	-	-	-	-	-	1	1
Optional common gain	-	-	-	-	-	-	-	2	-
InputDimensionVector for F or E	-	-	-	-	-	-	-	6	5
E0 / F0 *	-	7	-	-	-	-	-	-	-
Formulas *	-	8	-	-	-	-	-	-	-

* keine Schaltfläche (button), nur Erläuterung in Helpmenü